

Also available from Milton:

1. 2 in 1 Combi Steriliser Starter Kit

Microwave or cold water
Simple 2 in 1 steriliser that gives you the choice of two popular methods of sterilisation (Cold water & Microwave Method). Milton Combi features unique safety vent technology for better, faster steam sterilisation, is spill free and totally portable.

2. Anti-bacterial Tablets

Works in just 15 minutes, killing germs and bacteria. Ideal for home use or travel. No need to rinse. Used with 2 in 1 Combi as well as the Solo or in any container of 4 litres of water.

3. Anti-bacterial Solution

Double concentration. Use less for same germ kill. Hospital grade disinfectant. Multi-purpose formula, works in 15 minutes. Can be used for baby accessories and general cleaning. The nation's favourite, used and trusted since 1916. No rinsing required.

4. Antibacterial Surface Spray

Cleans and disinfects all surfaces in the home, is ideal for nursery and kitchen surfaces. Leaves a lovely fresh fragrance.

5. Milton Baby Bottle Cleaner

Clinically proven to remove milk residue. Fragrance-free, colouring-free, biodegradable formula. Developed to clean all baby feeding equipment and accessories. 100% plant-based cleaning agents.

6. Milton Anti-bacterial surface wipes

Ideal at home or on the move for quick clean-ups. 100% plant-based active ingredient. No need to rinse. Suitable for all baby equipment and accessories.

Milton Australia PTY LTD,
1/575 Darling Street,
Rozelle, NSW 2039
Call Australia 1800 506 750
or New Zealand 0800 555 895.
miltonbaby.com.au

All rights reserved. Trademarks owned by Milton International. Product colours/design may vary. 12/2018



1.



2.



3.



4.



5.



6.



Milton®

TRUSTED SINCE 1916



Solo microwave or cold water Travel Steriliser

THANK YOU FOR CHOOSING MILTON!

FITS MOST SIZE BOTTLES AND IN MOST MICROWAVES



IMPORTANT INSTRUCTIONS, PLEASE READ

Congratulations on choosing your new Milton Solo Steriliser with unique safety vent technology for better, faster steam sterilisation. Before using it for the first time, please take a little time to read this leaflet really carefully. Then keep it somewhere handy, as it contains important information that you might need to refer to again.

If you do mislay the leaflet, don't worry, you can download a copy at:
miltonbaby.com.au

YOUR MILTON SOLO PARTS GUIDE

Before you first use your new Milton Solo, familiarise yourself with its layout and parts. Then wash all the Solo parts in warm soapy water and rinse in cold water.

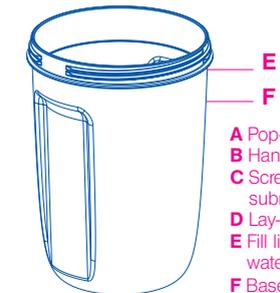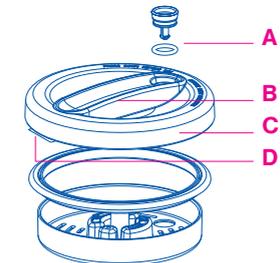

- A Pop-up safety vent
- B Handle
- C Screw lid with submerger and seal
- D Lay-flat lip
- E Fill line (1.25L) for cold water sterilisation
- F Base

2 ways to sterilise

choose the most convenient for you!

1 The Cold Water Method: Instructions for use With Milton Sterilising Tablets

1 CLEAN

- Wash all bottle parts in warm soapy water, then rinse in cold water. You can use Milton Baby Bottle Cleaner for best results.

2 ADD BOTTLE AND TEAT

- Place everything inside the Milton Solo, with the bottle opening facing **upwards**, then pour water into the bottle until it overflows into the Milton Solo and reaches the 1.25L fill line.
- Add 1 standard Milton Anti-bacterial Tablet.

3 CLOSE, SHAKE AND WAIT

- Screw the lid on, press the safety vent down and gently shake the Milton Solo – the bottle will be ready for use in just **15 minutes** and can stay in the solution until needed.
- Wash your hands. Unscrew the lid, take the contents out and shake off any excess water, there's no need to rinse.
- You can re-use the solution provided it is replaced every 24 hours.

Did you know?

The bottle can be left in the sterilising solution until you need to use it. When you have a used bottle simply clean it and immerse it in the solution. You can continue to add and remove bottles to the same solution for 24 hours.

WARNINGS: Do not transport the Solo full of Milton solution as the solution may leak through the valve. Avoid contact with base metal, silverware, silks, woollen or coloured fabrics (may bleach).

How to get the best use from your Milton Solo:

- Check the power of your microwave before you begin using it.
- Dry your Milton Solo well after each use to prevent a build-up of limescale.
- The individual parts of the Milton Solo can be cleaned in the dishwasher.
- To remove the submerger from the lid for cleaning, insert fingers into the holes as shown and twist anti-clockwise. Reverse the procedure to re-attach to the lid.
- It is only necessary to use the submerger when using the cold water sterilising method, although for convenience it can still be left attached to the lid when sterilising in a microwave.



Ask the experts:

Why should I sterilise?

During your little one's first 12 months, their immune system is still developing so they need extra protection from germs that may cause gastroenteritis and other nasty bugs. To do this, you need to make sure that all feeding equipment is clean and properly sterilised.

How long should I sterilise for?

Right up until your baby's first birthday


What should I sterilise?

Basically everything that can go into your baby's mouth! This includes bottles, teats, soothers, plastic feeding spoons, weaning bowls, teething rings, toys as well as your breast feeding accessories such as breast pump parts and milk storage containers.

Did you know?

At 6 months old, your baby's immune system is at its weakest and even at 1 year they will only have around 17% of adult immunity levels against the germs that cause diarrhoea and vomiting.

For more information, take a look at our website at: miltonbaby.com.au

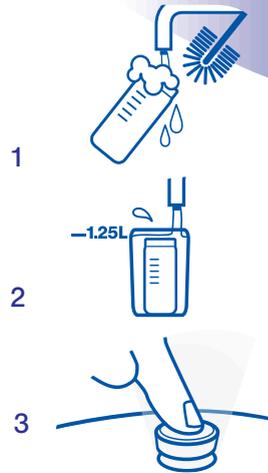

2 The Microwave Method: Instructions for use No tablets needed

1 CLEAN

- Wash all bottle parts in warm soapy water, then rinse in cold water. You can use Milton Baby Bottle Cleaner for best results.

2 FILL

- Pour exactly 60ml of water into the Milton Solo.
- IMPORTANT:** Your Milton Solo will not sterilise properly unless the correct amount of water is added. You can use a baby bottle to measure exactly 60ml of water.

3 LOAD AND CLOSE

- Place everything inside the Milton Solo, with the bottle opening facing **downwards**.
- Screw the lid on, and then press the safety vent down if raised. When steam pressure builds up inside Solo the safety vent will pop up automatically.

4 MICROWAVE

- The Milton Solo can be placed upright in the microwave if space permits or it can be placed on its side using the 'lay-flat' lip feature if you have a compact microwave.
- Microwave for 2 mins at 1100-1850W, 4 mins at 850-1000W, 6 mins at 500-800W.

5 COOL AND USE

- For safer handling, leave the Milton Solo to cool inside the microwave for at least 3 minutes after the microwave cycle has finished. **Remove the Milton Solo using oven gloves to prevent scalding.**
- Wash your hands well before handling sterilised items. Unscrew the lid and take the contents out using tongs.
- If you don't want to use your bottle straight away after microwaving, press the pop-up safety vent back down to keep the bottle sterile for longer.

Did you know?

If the Milton Solo is left unopened after microwaving and the safety vent is closed, the bottle will remain sterile in the Milton Solo for up to 24 hours.

WARNINGS FOR USE IN THE MICROWAVE:

- Check the power of your microwave before you begin using it.
- Check that the accessories you want to sterilise can be microwaved. Your Solo is safe to microwave.
- Always keep the microwave turntable clean and dry before use. For smaller microwaves, the turntable may need to be removed to allow the Milton Solo to fit in.
- Always ensure that your Milton Solo is clean with no old water residue before use in the microwave.
- The Milton Solo contains boiling water when being sterilised. Handle with care and keep out of the reach of children.
- Always wait 3 minutes before removing the Milton Solo from the microwave to let it cool down. Ensure that you take care, as it will contain hot water and steam. Always place it on a hard, heat-resistant surface.
- Do not put Milton Anti-bacterial Tablets or Solution inside the Milton Solo when you place it inside your microwave.
- Do not use metallic items in your Milton Solo as this could damage your microwave.

THIS PRODUCT MAY BREAK IF DROPPED WHILE FULL OF WATER.

